



  
Optimumtime

Ultimate Event Watch

Instructions





## THE ULTIMATE EVENT WATCH

"THE ULTIMATE EVENT WATCH" IS A WATERPROOF TIMER WITH JUMBO DISPLAY, AND FEATURES A CLOCK, A COUNTUP (FROM ZERO) TIMER WITH ALARM, AND A PROGRAMMED COUNTDOWN TIMER WITH ALARM.

 
THE BUTTONS HAVE A POSITIVE CLICK-TYPE OPERATION AND ARE ALSO ON THE TOP PANEL TO PREVENT ACCIDENTAL KNOCKING. ONCE THE TIMER IS RUNNING ONLY THE START/STOP BUTTON AND THE MODE BUTTON HAVE ANY FUNCTION.

AT ANY TIME A BUTTON IS PRESSED THAT IS GOING TO HAVE ANY FUNCTION THE ALARM SOUNDS A SINGLE BEEP.

ENGLISH

①



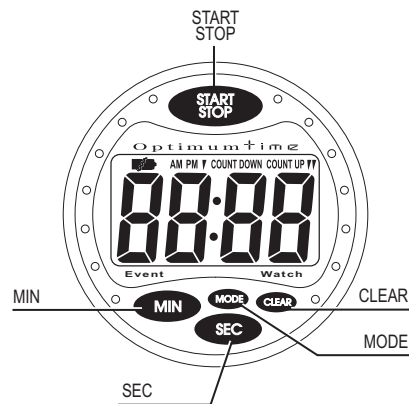

②



### OPERATING INSTRUCTIONS

#### TO SET THE TIME

- Put the timer into clock mode by pressing the "MODE" button. (The clock mode can be recognised by the flashing colon between the hours and minutes digits and also by either "AM" or "PM" being visible at the top of the display.)
  - Press the "CLEAR" button and hold it down for approximately 2 seconds until the display begins to flash.
  - Press the "MINUTES" button (marked "MIN") until the correct hour is shown.
- Notes**
- a) Each time you press the button the clock will advance 1 hour.
  - b) Keeping the button pressed in for a couple of seconds will start fast scrolling through the hours.
  - c) The clock is a 12 hour clock with AM/FM indicator.
- Once the correct hour is set, press the "SECONDS" button (marked "SEC"). This will alter the minutes in the same way as the hours were set.
  - Once the correct hours and minutes are set, press the "CLEAR" button one more time and the clock is set and running. The display will also stop flashing.

#### TO LEAVE THE CLOCK FUNCTION

- Press the "MODE" button. This will change the unit from clock to timer mode.
- Pressing the "MODE" button again will revert to the clock.
- It is possible to change from clock to timer or timer to clock regardless of whether the timer is running or not.
- Once in the timer mode there are 2 options: COUNTUP OR COUNTDOWN.

③





#### COUNTUP OPTION

1. Once in the timer mode press the "CLEAR" button. This will only function if the timer is not running. (If the timer is running press the "STOP" button first and then press the "CLEAR" button). This display will now show 0.00.
2. Press the "START" button and the timer will countup from zero in minutes and seconds up to a maximum of 59 mins 59 secs. The display will also show the word "COUNTUP".
3. During countup the timer can be stopped and restarted as many times as required.
4. The countup option has an alarm which sounds every minute. For each of the 3 seconds prior to every full minute the alarm will sound 4 short "pips" followed by a "peep" lasting the whole second exactly on the full minute.

#### PROGRAMMED COUNTDOWN MODE

1. To utilise the programmed countdown option first leave the clock mode by pressing the "MODE" button.
2. If the timer is running press the "STOP" button.
3. Press the "CLEAR" button. (The display will now show 0.00)
4. Press the "MINUTES" button (marked "MIN") to programme in the required minutes, and the "SECONDS" button (marked "SEC") to programme in the required minutes. The display will now show your programmed time. This will probably be the optimum time for the cross country phase (or steeplechase).
5. Press the "START" button and the timer will countdown in minutes and seconds towards zero. The display will also show the word "COUNTDOWN".
6. During countdown the timer can be stopped and restarted as many times as required.

④



7. When the timer has counted down to 0.00 an alarm sounds. This continues to sound for exactly one minute. Upon reaching zero the timer will begin to countup again. The display will also change to show the word "COUNTUP".

Therefore if you programme in the optimum time and countdown during the cross country and press the "STOP" button as you go through the finish the display will either show your time under or over the optimum time. E.g. if the display shows 0.09 and the word "COUNTDOWN" and the alarm has not sounded then you are 9 seconds inside the optimum time. If the display shows 0.09 and the word "COUNTUP" and the alarm has been sounding for 9 seconds then you are 9 seconds over the optimum time.

#### USEFUL HINTS

1. You may wish to programme 1 minute less than the optimum time. That way the alarm will sound with a minute to go. If you finish the course before the alarm stops you are inside the optimum time.
2. If you have a horse that is difficult to get into the start box or to avoid having to start your watch just as you should start the course, you can add say 30 seconds to the optimum time and get the starter to count you down to 30 seconds before you start. You can start your watch early and then be free to concentrate on getting your horse into the start box for a successful start.
3. The watch can be worn just like any normal watch on the wrist. However if the display is not convenient to look at, then the whole timer case can be turned inside the outer clip to get a better viewing angle.
4. If you prefer to have the watch on top of the hand, then the timer should be removed from the outer clip, & the elasticated strap removed from the outer clip. The outer clip can then be sewed to a glove using the 2 holes already in the clip. The timer can then be pushed back into the outer clip at whatever angle is required.

 
⑤





#### LOW BATTERY INDICATOR

The timer is equipped with a low battery indicator located in the top left hand side of the display. When the indicator is on, it is time to change the battery.

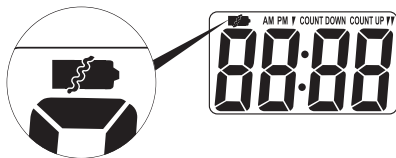


#### TO CHANGE THE BATTERY

1. Remove the timer from the outer clip.
2. Using a screwdriver to remove all 6 screws from the case back and remove the case back from the case front to reveal the battery.
3. Remove the old Battery and replace with a new one making sure the +ve contact faces upwards. (Avoid holding the battery so that your fingers touch both the +ve & -ve contacts at the same time).

⑥



 
4. Replace the case back making sure that the O ring seal is in the correct position.
5. Replace the four screws taking care not to overtighten them and thus strip the thread.

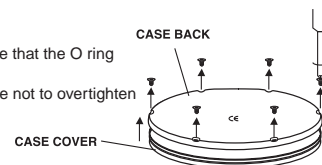

#### ADJUSTING THE ELASTIC STRAP

There is a right way and a wrong way to adjust the elastic strap. Please take note to avoid any chance of the strap coming undone.

 1. Place the watch on the wrist and pass the elastic through the clasp from the bottom to the top.
2. Pull the elastic to the required tightness and secure by pressing the clasp firmly closed.
3. Push the elastic loop over the spare length of elastic to keep the loose end tidy.

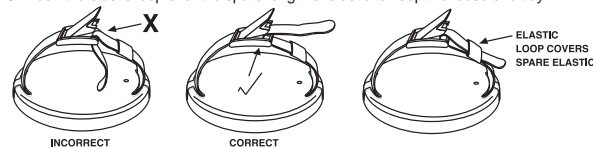

⑦






FRENCH

## MINUTERIE A GRAND AFFICHAGE "OPTIMUM TIME ULTIMATE EVENT WATCH"
 
### INSTRUCTIONS

Vous venez juste d'acheter la montre Optimum Time Ultimate Event Watch. Elle comporte un affichage de grande dimension, un chronomètre, une montre à comptage dégressif, et un chronographe donnant l'heure du jour. Cette montre peut être portée au poignet.

⑧

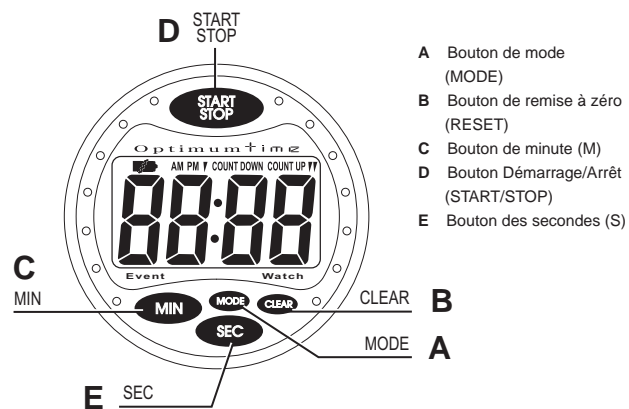

⑨





Le point de départ pour faire fonctionner votre minuterie **Optimum Time Ultimate Event Watch** est le temps normal. Si le temps normal n'est pas affiché, appuyez sur le bouton **"MODE"** (A) jusqu'à ce qu'il apparaisse. (L'affichage doit indiquer **"am"** ou **"pm"**.)

#### **POUR REGLER LA MONTRE SUR L'HEURE DU JOUR**

1. Appuyez sur le bouton **"RESET"** (remise à zéro) (B) pendant 2 secondes. L'affichage clignotera.
2. Appuyez sur le bouton **"M"** (C) pour faire avancer les heures. Il s'agit d'une montre sur 12 heures indiquant **am** (matinée) et **pm** (après-midi).
3. Appuyez sur le bouton **"S"** (E) pour faire avancer les minutes.
4. Une fois que les heures et les minutes sont correctement réglées, appuyez une fois sur le bouton **"RESET"** (B) pour démarrer la montre. Les chiffres cessent de clignoter. Appuyez sur le bouton **"MODE"** pour abandonner la fonction horloge.

⑩

#### **FONCTION CHRONOMETRE**

1. Appuyez sur le bouton **"RESET"** (B) pour remettre à zéro l'affichage. (Si la minuterie fonctionne, appuyez d'abord sur **"STOP"**).
2. Appuyez sur le bouton **"START"** (démarrage) (D). L'affichage indique alors **"Count Up"** (chronomètre) et la minuterie exécute un comptage progressif en minutes et en secondes.
3. Appuyez sur le bouton **"STOP"** (arrêt) (D) pour l'arrêter et sur le bouton **"START"** (démarrage) (D) pour remettre en route la minuterie aussi souvent que nécessaire.
4. A chaque minute, le chronomètre émet une alarme sonore.

#### **MODE COMPTAGE DEGRESSIF**

1. Abandonnez la fonction horloge en appuyant sur **"MODE"**.
2. Si la minuterie fonctionne, appuyez sur **"STOP"**.
3. Appuyez sur le bouton **"RESET"** (remise à zéro) (B). L'affichage indique 00:00.
4. Appuyez sur le bouton **"M"** (C) pour programmer les minutes et appuyez sur le bouton **"S"** (E) pour programmer les secondes. L'affichage indique le temps

⑪



 


programmé en minutes et en secondes.

- Appuyez sur le bouton "**START**" (démarrage) (D). La minuterie exécutera un comptage dégressif jusqu'à zéro et l'affichage indiquera **CountDown** (comptage dégressif).
- Vous pouvez arrêter le comptage dégressif et redémarrer aussi souvent que cela est nécessaire.
- Lorsque la minuterie atteint 00:00, une alarme sonore retentit et la minuterie commence à effectuer un comptage progressif. L'affichage change aussi pour indiquer **Count Up** (arrêt de la montre).

#### AVERTISSEMENT EN CAS DE PILE DECHARGEE

Lorsqu'il est temps de remplacer la pile, l'affichage indique **Battery Low** (pile déchargée).

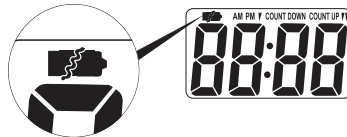


12



#### POUR REMPLACER LA PILE

 - Enlevez la minuterie de son support noir.
- Utilisez une pièce pour ouvrir le panneau de la pile.
- Remplacez l'ancienne pile par une pile neuve du même type, en vérifiant que le contact +ve est tourné vers le haut.
- Remettez en place la pile à l'aide d'une pièce en vérifiant que le panneau se place correctement dans le boîtier pour assurer l'étanchéité à l'eau.

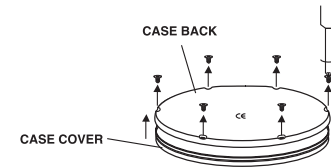


13







### REGLAGE DU SANGLON ELASTIQUE

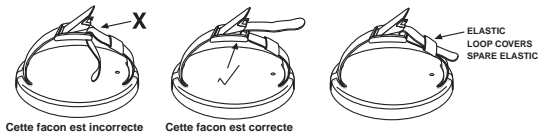 

14




### "OPTIMUM TIME ULTIMATE EVENT WATCH" JUMBO TIMER GEBRAUCHSANLEITUNG

 Wir gratulieren Ihnen zum Kauf Ihrer Optimum Time Ultimate Event Watch. Sie besitzt eine Jumboanzeige, eine Stoppuhr, einen Countdownzähler und eine Tageszeitfunktion. Die Uhr kann als Armbanduhr getragen werden.

GERMANY

15



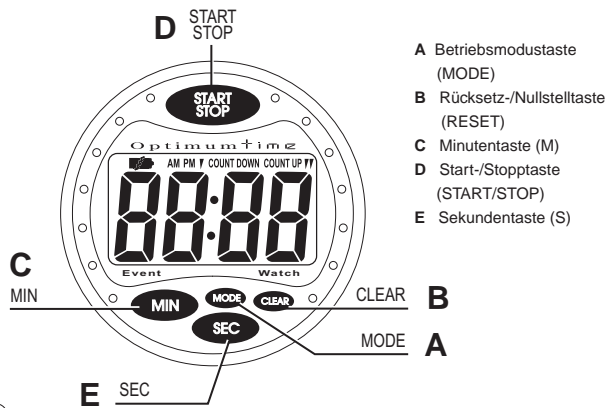

- A Betriebsmodustaste (MODE)
- B Rücksetz-/Nullstelltaste (RESET)
- C Minutentaste (M)
- D Start-/Stopptaste (START/STOP)
- E Sekundentaste (S)

16



Der Ausgangspunkt für den Betrieb Ihres Optimum Time Ultimate Event Watch ist die Normalzeit. Ist die Normalzeit nicht angezeigt, drücken Sie auf **"MODE"** bzw. Taste A, bis sie entsprechend angezeigt wird. (In der Anzeige erscheint **"am"** für Uhrzeiten ab 0.00 Uhr morgens bis 12.00 mittags und **"pm"** für Uhrzeiten von 12.00 mittags bis 24.00 nachts).

#### EINSTELLUNG DER TAGESZEITFUNKTION

1. **"RESET"** bzw. Taste B zwei Sekunden lang gedrückt halten. Die Anzeige blinkt dann.
2. Auf **"M"** bzw. Taste C drücken, um die Stunden vorzustellen. Es handelt sich um eine 12-Stunden-Uhr mit einer **"am"** - und **"pm"**-Anzeige.
3. Auf **"S"** bzw. Taste E drücken, um die Minuten vorzustellen.
4. Nach Einstellung der Stunden und Minuten einmal auf **"RESET"** bzw. Taste B drücken, um die Uhr zu starten. Die Anzeige blinkt dann nicht mehr. Auf **"MODE"** drücken, um die Uhrfunktion zu verlassen.

17





### STOPPUHRFUNKTION

1. Auf **"RESET"** bzw. Taste B drücken, um die Anzeige auf Null zu stellen. (Wenn der Zeitnehmer läuft, erst auf **"Stop"** drücken.)
2. Auf **"START"** bzw. Taste D drücken. Die Anzeige zeigt dann Count Up (Stoppuhr) an und der Zeitnehmer zählt in Minuten und Sekunden.
3. Zum Stoppen auf **"STOP"** bzw. Taste D drücken und dann auf **"START"** bzw. Taste D drücken, um den Zeitnehmer beliebig neu zu starten.
4. Jeweils nach Ablauf einer Minute erklingt ein akustisches Alarmsignal.

### COUNTDOWNFUNKTION

1. Die Uhrfunktion durch Drücken auf **"MODE"** verlassen.
2. Für den Fall, daß der Zeitnehmer läuft, erst auf **"STOP"** drücken.
3. Auf **"RESET"** bzw. Taste B drücken. Die Anzeige zeigt 00:00 an.
4. Auf **"M"** bzw. Taste C zur Eingabe der Minuten drücken und dann auf **"S"** bzw. Taste E zur Eingabe der Sekunden drücken. Die Anzeige zeigt die eingegebene Zeit in Minuten und Sekunden an.

 
18



5. Auf **"START"** bzw. Taste D drücken. Der Zeitnehmer wird rückwärts bis Null zählen und die Anzeige zeigt **CountDown** an.
6. Der Countdown kann beliebig gestoppt und neu gestartet werden.
7. Erreicht der Zeitnehmer 00:00, erklingt ein akustisches Alarmsignal und der Zeitnehmer beginnt wieder vorwärts zu zählen. Die Anzeige springt **ebenfalls** auf **Count Up** zurück.

### BATTERIELADEZUSTANDSWARNUNG

Ist der Batterieladezustand unzureichend, zeigt die Anzeige **Battery Low** (Batterie fast leer) an.

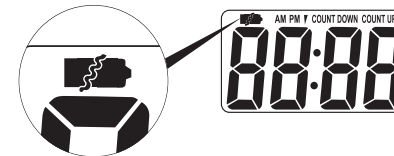


19





### BATTERIEWECHSEL

 
1. Den Zeitnehmer aus dem schwarzen Halter nehmen.
2. Mit einer Münze das Batteriefach öffnen.
3. Die alte Batterie mit einer neuen des gleichen Typs ersetzen und auf korrekte Polung achten, d.h. +-Kontakt zeigt nach oben.
4. Das Batteriefach mit einer Münze schließen und darauf achten, daß die Klappe fest und sicher sitzt, um einen wasserdichten Verschuß zu gewährleisten.

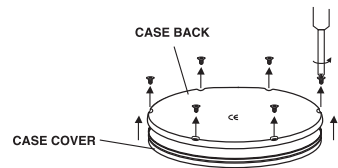

20



### ELASTIK ARMBAND

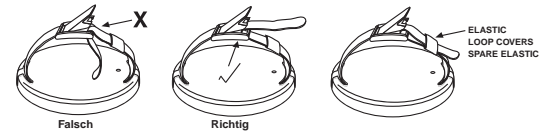 

Es gibt zwei möglichkeiten wie man dieser Armband tragt. Von obej nach unten ist falsch. Von unten nach oben ist richtig.

21





Also available in the Optimum Time Range:

**Ultimate Event Watch - The Classic**

**Ultimate Sailing Watch - The Classic**

**The Timesaver - Event Timing Equipment**

**3 Day Event Watch - The Classic & The Compact**

**Ultimate Endurance Watch - The Classic & The Compact**

**Ultimate Football Timer - The Classic & The Compact**

**Ultimate Rugby Timer - The Classic & The Compact**

**Ultimate Hockey Timer - The Classic & The Compact**

**Heart Rate Monitor's**

### **Optimum Time**

P.O. Box 39

Market Deeping

Peterborough

PE6 8XQ

England

Tel 01733 333324 Fax 01733 333700

International Tel +44 1733 333324 Fax +44 1733 333700

[www.optimumtime.co.uk](http://www.optimumtime.co.uk)

